



I N S T R U C T I O N M A N U A L

# HEXATRIX GLOW

6 lens multi-beam scanning LED lighting effect

M A N U A L V E R S I O N 1 . 0

07 / 07 / 11

192 x 5mm RGB LEDs  
72 x red, 72 x green, 48 x blue LEDs  
Full DMX512 operation / 10 DMX channels  
Auto mode / Sound-to-Light operation via built-in mic  
Variable mic sensitivity / Master/Slave mode  
Adjustable metal hanging bracket  
Safety chain loop / Mains fused IEC  
Dimensions: 410 x 170 x 320mm (WxHxD)  
Weight: 2Kg

For the latest instruction manual updates and information on the entire Kam range visit:

[www.kam.co.uk](http://www.kam.co.uk)

Kam products are manufactured by: **Lamba plc**, Unit 1, Southfields Road, Dunstable, Bedfordshire, United Kingdom LU6 3EJ  
Telephone: (+44) (0)1582 690600 • Fax: (+44) (0)1582 690400 • Email: [mail@lambapl.com](mailto:mail@lambapl.com) • Web: [www.lambapl.com](http://www.lambapl.com)

If this product is ever no longer functional please take it to a recycling plant for environmentally friendly disposal.

Due to continuous product development, specifications and appearance are subject to change.

© Copyright Lamba plc 2010. E&OE.

**Thank you for purchasing this KAM product, we are sure that it will serve you for many years to come.**

To optimise the performance of this product, please read these operating instructions carefully to familiarise yourself with the basic operations of this unit. After you have read the instructions, please retain them for future reference.

This unit has been tested at the factory before being shipped to you.

To prevent or reduce the risk of electrical shock or fire, do not expose the unit to rain or moisture. To prevent a fire hazard, do not expose the unit to any naked flame sources. Unplug this apparatus during lightning storms or if it is unlikely to be used for long periods of time.

When installing the unit, please ensure you leave enough space around the unit for ventilation. Slots and openings in the unit are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. To prevent fire hazard, the openings should never be blocked or covered.

Always handle the power cable by the plug. Never pull out the plug by pulling on the cable. Never touch the power cable when your hands are wet as this could cause an electric shock. Do not tie a knot in the cable. The power cable should be placed such that it is not likely to be stepped on. A damaged power cable can cause a fire or give you an electrical shock. Check the power cord periodically, if you ever find that it is damaged, replace it before using the unit again. Contact your retailer for a replacement.

The voltage of the available power supply differs according to country or region. Be sure that the power supply voltage of the area where this unit is to be used meets the required written on the unit.



**The lightning flash symbol inside a triangle is intended to alert the user to the presence high voltage within the unit's enclosure that may be of sufficient power to constitute a risk of electrical shock to persons.**

**Caution: to prevent the risk of electric shock, do not attempt to open the unit. No user-serviceable parts inside. Refer all servicing to qualified service personnel.**

**The exclamation mark inside a triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.**

Any modification carried out on the unit may invalidate the unit's warranty.

If applicable, only use the stand, tripod or bracket specified or sold with the apparatus.

Select the installation location of your unit carefully. Avoid placing it in direct sunlight or locations subject to vibration and excessive dust. Do not use the unit where there are extremes in temperature (below 41°F / 5°C or exceeding 95°F / 35°C).

Unpacking and safety: Please unpack your new product carefully, your new product should reach you in perfect condition. Please check that no damage has occurred during transit. If any damage is found, do not operate your unit. Please contact the retailer you purchased it from immediately. If there is any damage to the mains cable do not use the device. Always disconnect the unit from the mains supply when carrying out any servicing or cleaning of the unit.

The serial number for this equipment should be located on the rear or underside of the unit. Please make a note of this number as you will need it for your warranty, it is a good idea to keep a copy of the serial number for your own records.

Function	DIP 1	DIP 2	DIP 3	DIP 4	DIP 5	DIP 6	DIP 7	DIP 8	DIP 9	DIP 10	DIP 11	DIP 12	Mode
Single LED move from left to right and up to down	1	0	0	0	0	0	0	0	0	1	X	0	Auto (Master)
Single row LED move from up to down	0	1	0	0	0	0	0	0	0	1	X	0	Auto (Master)
Single row LED move from left to right	0	0	1	0	0	0	0	0	0	1	X	0	Auto (Master)
LED move from up to down and left to right	0	0	0	1	0	0	0	0	0	1	X	0	Auto (Master)
LED flash and move from up to down and left to right	0	0	0	0	1	0	0	0	0	1	X	0	Auto (Master)
LED1.2.3.4 eye light bounce-Slow	0	0	0	0	0	0	0	0	0	1	X	0	Auto (Master)
LED1.2.3.4 eye light bounce-Medium	0	0	0	0	0	0	1	0	0	1	X	0	Auto (Master)
LED1.2.3.4eye light bounce-Fast	0	0	0	0	0	0	0	1	0	1	X	0	Auto (Master)
Strobe	0	0	0	0	0	0	0	0	1	1	X	0	Auto (Master)
Auto program	0	0	0	0	0	0	0	0	0	0	X	0	Auto (Master)
Sound Control	0	0	0	0	0	0	0	0	0	0	X	1	Sound-control (Master)

1=ON  
0=OFF  
X=Function

### Auto Mode

In order to select Auto mode, set dipswitches 0 to 12 to the OFF position.

### Sound Control

In order to select Sound Controlled Mode, set dipswitch 12 to the ON position and dipswitches 1 to 11 to the OFF position.

### Master/Slave

To set the first unit to master, select the desired function mode using the dipswitch guide above (example, set the dipswitch 12 on for sound controlled mode). Using a 3 pin XLR/DMX cable, connect from the DMX output on the first unit (master) to the second unit's (slave) DMX input. Set dipswitch 1 on the second unit (slave) into the on position. All other slave units must be set in the same way. Only one master unit must be set.

## DMX Control

Channel	Value	Function
CH1	0-14	Blackout
	15-19	Red
	20-24	Green
	25-29	Blue
	30-34	Red/Green
	35-39	Red/Blue
	40-44	Green/Blue
	45-49	Red/Green/Blue
	100-255	Select the automatic program
CH2	Set the DMX value of Channel 1 to more than 50	
	0-255	Select the automatic program
CH3	0-255	Speed from fast to slow
CH4	Set the DMX value of Channel 1 between 50-99	
	0-255	Up to down, slow to fast
CH5	Set the DMX value of Channel 1 between 50-99	
	0-255	Left to right, slow to fast
CH6	Set the DMX value of Channel 1 between 50-99	
	0-255	Inside to outside, slow to fast
CH7	Set the DMX value of Channel 1 between 50-99	
	0-255	Up to down, left to right, inside to outside, slow to fast
CH8	0-255	Strobe from Slow to fast
CH9	Set the DMX value of Channel 1 between 15-99	
	0-14	All bright
	15-255	Dimmer
CH10	Set the DMX value of Channel 1 between 15-99	
	0-127	6 LED lenses illuminated
	128-190	4 LED lenses illuminated
	191-255	2 LED lenses are not illuminated

## Specifications

Power supply	90-250 V AC, 50 Hz ~ 60 Hz ~
Power consumption	20W
Current	0.2A
Sound control	via built-in microphone
DMX-512-connection	3-pin XLR
Dimensions	410 x 170 x 320mm (WxHxD)
Weight	2 kg
Maximum ambient temperature T	45 °C
Maximum housing temperature T	50 °C
Fuse	F0.5A, 250V
Channel	10
Number of LEDs	5mm x 192pcs